
产品结构与连接
PRODUCT OVERVIEW AND CONNECTION

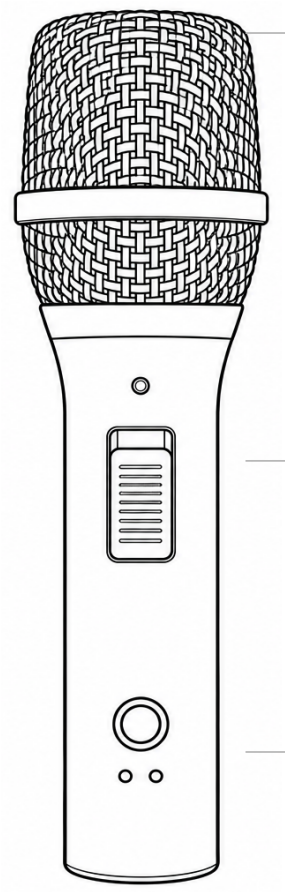

01 顶部收音
End-address pickup

对准网罩顶部说话。
Speak into the top of the grille.

握住机身，不要包住网罩。
Hold the handle. Do not cover the grille.

02 状态灯与开关
Status LED and switch

ON 收音；OFF 停止收音。
ON enables pickup. OFF stops pickup.


绿灯表示工作，红灯表示静音。
Green means active. Red means muted.

03 模式切换键
Mode button

切换耳机或话筒音量调节模式。
Select headphone or microphone volume control.

指示灯对应机身上的模式图标。
The LEDs show the selected mode.

04 底部接口
BOTTOM CONNECTIONS

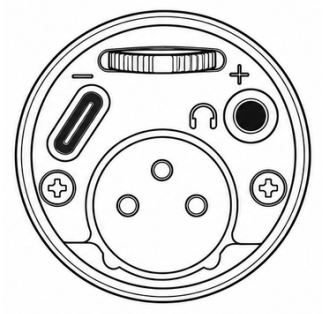

USB-C：数字音频输出。
USB-C: digital audio output.

XLR：三针模拟音频输出。
XLR: 3-pin analog audio output.

3.5 mm：耳机监听接口。
3.5 mm: headphone monitoring socket.

音量滚轮：调节当前模式的音量。
Volume wheel: adjusts the volume for the selected mode.

先选择音量模式，再使用底部滚轮调节。
Select the volume mode. Then use the wheel at the bottom to adjust the volume.

保养：用干燥软布擦拭。避免受潮、跌落和自行拆卸。
Care: Wipe with a dry, soft cloth. Keep dry. Do not drop or disassemble the microphone.

连接操作与技术规格
OPERATION AND SPECIFICATIONS

05 USB-C 数字连接
USB-C CONNECTION

连接支持 USB 音频的手机或电脑。
Connect the USB-C cable to a phone or computer that supports USB audio.

将开关拨到 ON。
Set the switch to ON.

在软件中选择外接麦克风。
Select the external microphone in the app.

允许软件使用麦克风。
Allow microphone access for the app.

手机如有需要，开启 OTG。
Enable OTG on the phone if required.

06 XLR 模拟连接
XLR CONNECTION

先将声卡或调音台的输入增益调低。
Set the input gain on the audio interface or mixer to minimum.

将 XLR 线接到麦克风输入口。
Connect the XLR cable to the microphone input.

试音，再调整输入增益。
Test the sound. Then adjust the input gain.

设备及软件的兼容性可能不同。
Compatibility varies by device and app.

07 收音建议
RECORDING TIPS

嘴与网罩保持约 5 至 10 cm。
Keep your mouth about 5 to 10 cm from the grille.

略微偏离网罩正前方，减少气流冲击。
Speak slightly across the grille to reduce direct airflow.

靠近会增加低频，也更容易产生喷麦声。
A shorter distance adds bass but increases breath noise.

录制前试音 10 秒。
Test the sound for 10 seconds before recording.

声音失真时，降低输入增益。
If the sound is distorted, reduce the input gain.

08 常见问题
TROUBLESHOOTING

没有声音 / No sound

检查连接线和开关。检查软件输入设备和麦克风权限。
Check the cable and switch. Check the selected input device and microphone permissions.

声音小或失真 / Low or distorted sound

先调整嘴与网罩的距离。再调整话筒音量或软件输入增益。
Adjust the distance between your mouth and the grille. Then adjust the microphone volume or input gain in the app.

啸叫或回声 / Feedback or echo

降低音箱音量，并远离音箱。优先使用耳机监听，检查重复监听。
Lower the speaker volume. Move away from the speakers. Use headphones for monitoring. Check for duplicate monitoring.

09 技术规格
SPECIFICATIONS

拾音类型 Transducer
动圈 Dynamic

USB 音频 USB audio
16 bit / 48 kHz

灵敏度 Sensitivity
-54 ± 3 dB (1 kHz)

电压 / 电流 Voltage / current
DC 5 V / 185 mA

指向模式 Polar pattern
超心形 Hypercardioid

频率响应 Frequency response
40 Hz - 20 kHz

信噪比 Signal-to-noise ratio
92 dB

最大声压级 Maximum SPL
120 dB (1 kHz, THD ≤ 1%)

包装：TX4 麦克风 1 支、Type-C 线 1 条、XLR 线 1 条。
In the box: one TX4 microphone, one Type-C cable and one XLR cable.